

GAMESIR G7 HE WIRELESS CONTROLLER FOR XBOX



GAMESIR G7 HE WIRELESS CONTROLLER FOR XBOX



GAMESIR G7 HE WIRELESS CONTROLLER FOR XBOX



GAMESIR G7 HE WIRELESS CONTROLLER FOR XBOX



GAMESIR G7 HE WIRELESS CONTROLLER FOR XBOX



GAMESIR G7 HE WIRELESS CONTROLLER FOR XBOX



ENGLISH https://www.gamesir.hk/pages/manual-gamesir-g7-he (E-manual)

简体中文 https://doc.xiaoj.com/fah/g7-he (电子手册)

DEUTSCH https://www.gamesir.hk/pages/manual-gamesir-g7-he (E-Handb cher)

FRANCAIS https://www.gamesir.hk/pages/manual-gamesir-g7-he (Manuels  lectroniques)

ITALIANO https://www.gamesir.hk/pages/manual-gamesir-g7-he (Manuals elettronico)

ESPA OL https://www.gamesir.hk/pages/manual-gamesir-g7-he (Manuales electr nicos)


PACKAGE CONTENTS

GameSir-G7 HE *1 3m USB-C Cable *1 User Manual *1 Thank You & After-sale Service Card *1 GameSir Sticker *1 Certification *1

REQUIREMENTS


*Xbox One / Xbox Series X|S / PC (Win 10 or above) with USB port

DEVICE LAYOUT

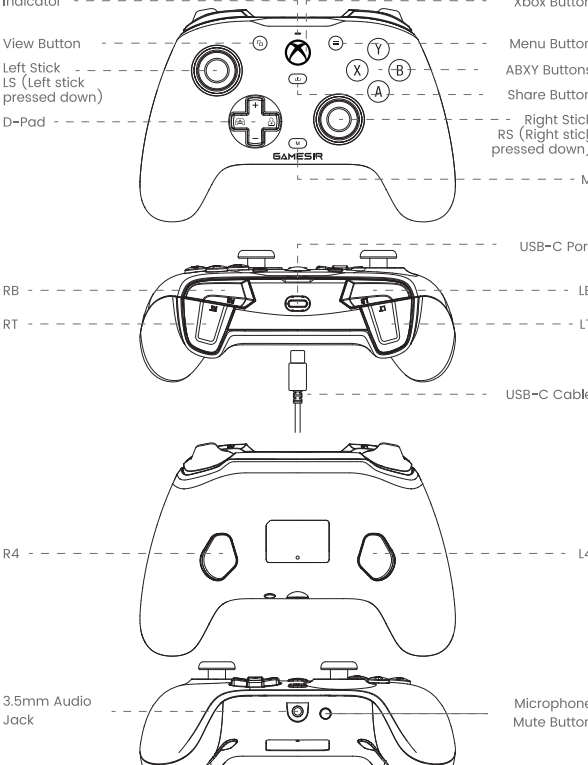

CONNECT

 Use the included Type-C cable to connect the handle to the device, and short press the Home button to power on. Solid White=Connected




VOLUME CONTROL


1. Hold the M button + D-pad's Left/Right to Increase/Decrease the Master Volume. (It levels in total) *There will be a beep when adjusting to the maximum/minimum level.



2. Hold the M button + D-pad's Up/Down to Increase/Decrease the Master Volume. (It levels in total) *There will be a beep when adjusting to the maximum/middle/minimum level.

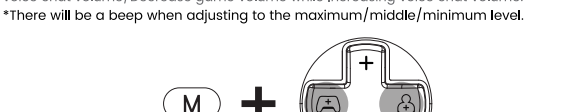


3. Microphone Mute Function: When your headphone/earphone is plugged in, press the Microphone Mute Button, the indicator will become solid red and the Microphone Mute function is On. Press the Microphone Mute button again, the indicator will go out and the Microphone Mute function is Off. (Default)

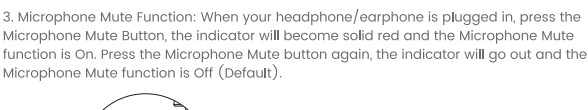

1. 设定R4/L4按键: 长按R4/L4键3秒, 当指示灯亮起时, 单击按键, 指示灯熄灭, 指示灯常亮, R4/L4键设定完成。

2. 取消R4/L4键值: 同时按住M键+R4/L4键3秒, 当指示灯熄灭时, 单击R4/L4键, 指示灯常亮, R4/L4键值取消消。

BACK BUTTONS SETTINGS

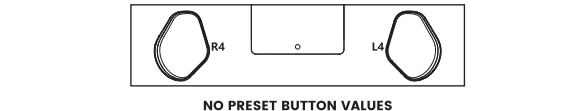

NO PRESET BUTTON VALUES (Mappable buttons: A/B/X/Y/LB/RB/LT/RT/LS/RS/D-pad/Menu/View Button)

1. Set R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap the button you want to map to R4/L4. The indicator turns solid to indicate R4/L4 button value is set.

2. Cancel R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap R4/L4 button. The indicator turns solid to indicate R4/L4 button value is cancelled.

JOYSTICKS & TRIGGERS CALIBRATION

Use GameSir Nexus software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

PROFILE SWITCH

Press the M + A/B/X/Y/L4 buttons in sequence to switch to the corresponding profile. M + Y = Default M + B = Profile 1 M + A = Profile 2 M + X = Profile 3

CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download "GameSir Nexus" software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

*If the R4/L4 button value set in the software is different from the manual setting, the latest setting shall prevail, and the former will be directly overwritten.

PLEASE READ THIS PRECAUTIONS CAREFULLY

CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed. Do not use the product near fire. Do not expose to direct sunlight or high temperatures. Do not use the product in a humid or dusty environment. Do not impact the product or cause it to fall due to wrong impact. Do not touch USB port directly or bring close metal pins. Do not strongly bend or pull cables or wires. Do not use the product with any other accessories. Do not use the product with any gas, gasoline or thinner. Do not use the product for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes. Do not look directly at the optical light. It might damage your eyes. Do not have any quality concerns or suggestions, please contact Gamesir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

APPLICABLE IN THE EUROPEAN UNION AND OTHER EUROPEAN COUNTRIES WITH SEPARATE COLLECTION SYSTEMS. This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE. Holey, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G7 HE Controller is in compliance with Directive 2014/53/EU & 2011/65/EU and its amendment (EU) 2019/863.

JUST IN GAME. www.gamesir.hk


包装内容

GameSir-G7 HE *1 3m USB-C数据线的(3米) *1 说明书*1 售后服务卡*1 GameSir贴纸*1 合格证*1

要求

*Xbox One / Xbox Series X|S / 带USB接口的电脑 (Win 10或更高版本)。

设备布局

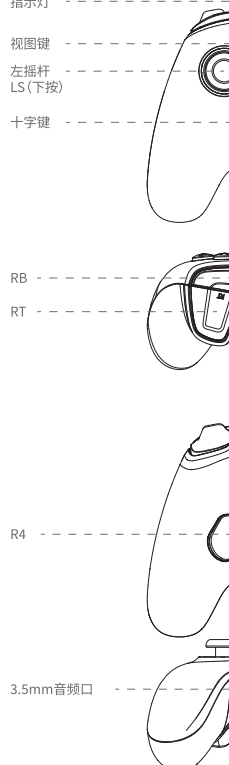


连接

使用附赠的Type-C线连接手柄与设备, 短按Home键开机。白色常亮=连接成功。



VOLUME CONTROL

1. 按住M键 + 方向键上下, 可增大主音量/减小主音量。(共18级) *调节到最大/最小时, 会有提示音。

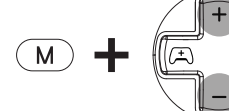

2. 按住M键 + 方向键左右, 可增大游戏音量(同步减小声音量)/减小游戏音量(同步增大声音量)。(共18级) *调节到最大/中间/最小时, 会有提示音。




3. 麦克风静音功能: 当您插入耳机/耳麦时, 按下麦克风静音按钮, 指示灯会变成常亮红色, 麦克风静音功能开启。再次单击静音按钮, 指示灯熄灭, 静音功能关闭(默认)。



1. 设定R4/L4键值: 长按R4/L4键3秒, 当指示灯亮起时, 单击按键, 指示灯常亮, R4/L4键设定完成。

2. 取消R4/L4键值: 同时按住M键+R4/L4键3秒, 当指示灯熄灭时, 单击R4/L4键, 指示灯常亮, R4/L4键值取消消。

BACK BUTTONS CALIBRATION

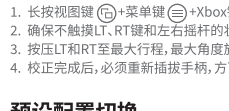

NO PRESET BUTTON VALUES (Mappable buttons: A/B/X/Y/LB/RB/LT/RT/LS/RS/D-pad/Menu/View Button)

1. Set R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap the button you want to map to R4/L4. The indicator turns solid to indicate R4/L4 button value is set.

2. Cancel R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap R4/L4 button. The indicator turns solid to indicate R4/L4 button value is cancelled.

JOYSTICKS & TRIGGERS CALIBRATION

Use GameSir Nexus software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

PROFILE SWITCH

Press the M + A/B/X/Y/L4 buttons in sequence to switch to the corresponding profile. M + Y = Default M + B = Profile 1 M + A = Profile 2 M + X = Profile 3

CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download "GameSir Nexus" software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

*If the R4/L4 button value set in the software is different from the manual setting, the latest setting shall prevail, and the former will be directly overwritten.

PLEASE READ THIS PRECAUTIONS CAREFULLY

CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed. Do not use the product near fire. Do not expose to direct sunlight or high temperatures. Do not use the product in a humid or dusty environment. Do not impact the product or cause it to fall due to wrong impact. Do not touch USB port directly or bring close metal pins. Do not strongly bend or pull cables or wires. Do not use the product with any other accessories. Do not use the product with any gas, gasoline or thinner. Do not use the product for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes. Do not look directly at the optical light. It might damage your eyes. Do not have any quality concerns or suggestions, please contact Gamesir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

APPLICABLE IN THE EUROPEAN UNION AND OTHER EUROPEAN COUNTRIES WITH SEPARATE COLLECTION SYSTEMS. This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE. Holey, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G7 HE Controller is in compliance with Directive 2014/53/EU & 2011/65/EU and its amendment (EU) 2019/863.

JUST IN GAME. www.xiaoj.com


PAKETINHALT

GameSir-G7 HE *1 USB-C-Kabel 3 m *1 Benutzerhandbuch *1 Danke- und Kundendienstkarte *1 GameSir Aufkleber *1 Zertifikat *1

ANFORDERUNGEN

*Xbox One / Xbox Series X|S / PC (Win 10 oder h her) mit USB-Anschluss

 GER TELAYOUT

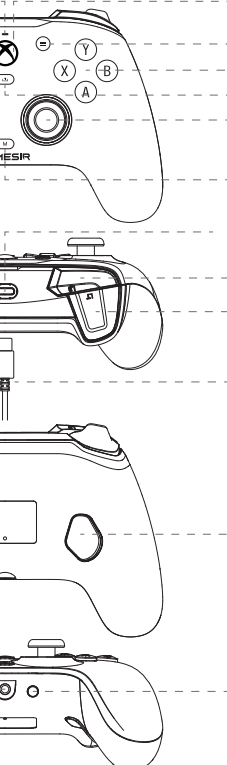


VERBINDUNGSANZEIGE

Verwenden Sie das mitgelieferte Type-C-Kabel, um den Griff mit dem Ger t zu verbinden, und dr cken Sie kurz die Home-Taste, um das Ger t einzuschalten. Wei  Leuchte = Verbunden



VOLUME CONTROL

 
1. Halte die M-Taste gedr ckt und dr cke auf dem Pad nach oben oder unten, um die Spielst rke zu erh hen bzw. die Sprachchat-Lautst rke zu reduzieren bzw. die Spielst rke zu reduzieren und die Sprachchat-Lautst rke zu erh hen. *Wenn die niedrigste oder h chste Stufe eingestellt wird, ert nt ein Piepton.



2. Halte die M-Taste gedr ckt und dr cke auf dem Pad nach links oder rechts, um die Spielst rke zu erh hen und die Sprachchat-Lautst rke zu reduzieren bzw. die Spielst rke zu reduzieren und die Sprachchat-Lautst rke zu erh hen. *Wenn die niedrigste, mittlere oder h chste Stufe eingestellt wird, ert nt ein Piepton.



 
3. Funktion de Mikrofon stumm schalten: Dr cke die Mikrofon-Stumm-Taste, w hrend die Kopfh rer angeschlossen sind. Die Anzeige leuchtet rot und das Mikrofon ist dann auf stumm geschaltet. Wenn du diese Taste erneut dr ckst, erf hst die LED-Anzeige daraufhin und die Mikrofon-Stummumschaltung ist ausgeschaltet (Standard-Einstellung).



1. 设定R4/L4键值: 长按R4/L4键3秒, 当指示灯亮起时, 单击按键, 指示灯常亮, R4/L4键设定完成。

2. 取消R4/L4键值: 同时按住M键+R4/L4键3秒, 当指示灯熄灭时, 单击R4/L4键, 指示灯常亮, R4/L4键值取消消。

 BACK BUTTONS CALIBRATION



NO PRESET BUTTON VALUES (Mappable buttons: A/B/X/Y/LB/RB/LT/RT/LS/RS/D-pad/Menu/View Button)

1. Set R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap the button you want to map to R4/L4. The indicator turns solid to indicate R4/L4 button value is set.

2. Cancel R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap R4/L4 button. The indicator turns solid to indicate R4/L4 button value is cancelled.

JOYSTICKS & TRIGGERS CALIBRATION

Use GameSir Nexus software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

PROFILE SWITCH

Press the M + A/B/X/Y/L4 buttons in sequence to switch to the corresponding profile. M + Y = Default M + B = Profile 1 M + A = Profile 2 M + X = Profile 3

CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download "GameSir Nexus" software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

*If the R4/L4 button value set in the software is different from the manual setting, the latest setting shall prevail, and the former will be directly overwritten.

PLEASE READ THIS PRECAUTIONS CAREFULLY

CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed. Do not use the product near fire. Do not expose to direct sunlight or high temperatures. Do not use the product in a humid or dusty environment. Do not impact the product or cause it to fall due to wrong impact. Do not touch USB port directly or bring close metal pins. Do not strongly bend or pull cables or wires. Do not use the product with any other accessories. Do not use the product with any gas, gasoline or thinner. Do not use the product for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes. Do not look directly at the optical light. It might damage your eyes. Do not have any quality concerns or suggestions, please contact Gamesir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

APPLICABLE IN THE EUROPEAN UNION AND OTHER EUROPEAN COUNTRIES WITH SEPARATE COLLECTION SYSTEMS. This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE. Holey, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G7 HE Controller is in compliance with Directive 2014/53/EU & 2011/65/EU and its amendment (EU) 2019/863.

JUST IN GAME. www.gamesir.hk


CONTENU

GameSir-G7 HE *1 C ble USB-C de 3 m *1 Mode d'emploi *1 Certification *1 Carte de service apr s-vente et de remerciement *1 Autocollant GameSir *1

MAT RIEL REQUIS

*Xbox One/Xbox Series X|S/PC (Windows 10 ou version ult rieure) avec port USB

PR SENTATION DE L'APPAREIL

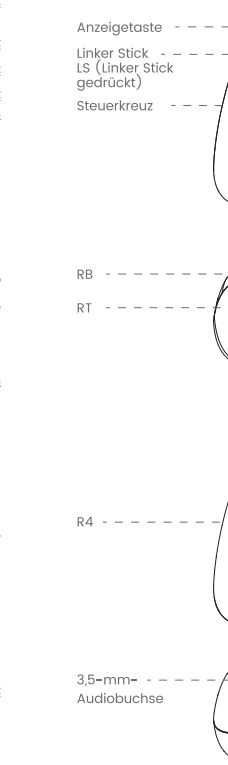

CONNEXION

Utilisez le c ble Type-C fourni pour connecter la poign e   l'appareil et appuyez brievement sur le bouton d'accueil pour l'allumer. Blanc fixe = Connect 



CONTR LE DU VOLUME

1. Maintenez appuy s le bouton M et la croix directionnelle vers le haut/bas pour augmenter/diminuer le volume principal. (Il niveaue au total). *Un bip retentira lors du r glage au niveau maximum/minimum.



2. Maintenez appuy s le bouton M et la croix directionnelle vers la gauche/droite pour augmenter le volume de jeu et augmenter le volume du chat/vocod. Pour diminuer le volume de jeu et r duire le volume d'chat vocod, r duire le volume de jeu et augmenter le volume d'chat vocod. *Un bip retentira lors du r glage au niveau maximum/moyen/minimum.



3. Fonction de d activation du micro: Lorsque votre casque ou vos  couteurs sont branch s, appuyez sur le bouton de d activation du micro: le voyant lumineux devient rouge fixe, indiquant que la fonction de d activation du micro est activ e. Appuyez   nouveau sur le bouton de d activation du micro: le voyant lumineux s' teint, indiquant que la fonction de d activation du micro est d activ e (par d faut).



1. 设定R4/L4键值: 长按R4/L4键3秒, 当指示灯亮起时, 单击按键, 指示灯常亮, R4/L4键设定完成。

2. 取消R4/L4键值: 同时按住M键+R4/L4键3秒, 当指示灯熄灭时, 单击R4/L4键, 指示灯常亮, R4/L4键值取消消。

BACK BUTTONS CALIBRATION



NO PRESET BUTTON VALUES (Mappable buttons: A/B/X/Y/LB/RB/LT/RT/LS/RS/D-pad/Menu/View Button)

1. Set R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap the button you want to map to R4/L4. The indicator turns solid to indicate R4/L4 button value is set.

2. Cancel R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap R4/L4 button. The indicator turns solid to indicate R4/L4 button value is cancelled.

JOYSTICKS & TRIGGERS CALIBRATION

Use GameSir Nexus software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

PROFILE SWITCH

Press the M + A/B/X/Y/L4 buttons in sequence to switch to the corresponding profile. M + Y = Default M + B = Profile 1 M + A = Profile 2 M + X = Profile 3

CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download "GameSir Nexus" software at Microsoft Store on Xbox/PC or gamesir.hk. Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

*If the R4/L4 button value set in the software is different from the manual setting, the latest setting shall prevail, and the former will be directly overwritten.

PLEASE READ THIS PRECAUTIONS CAREFULLY

CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed. Do not use the product near fire. Do not expose to direct sunlight or high temperatures. Do not use the product in a humid or dusty environment. Do not impact the product or cause it to fall due to wrong impact. Do not touch USB port directly or bring close metal pins. Do not strongly bend or pull cables or wires. Do not use the product with any other accessories. Do not use the product with any gas, gasoline or thinner. Do not use the product for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes. Do not look directly at the optical light. It might damage your eyes. Do not have any quality concerns or suggestions, please contact Gamesir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

APPLICABLE IN THE EUROPEAN UNION AND OTHER EUROPEAN COUNTRIES WITH SEPARATE COLLECTION SYSTEMS. This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE. Holey, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G7 HE Controller is in compliance with Directive 2014/53/EU & 2011/65/EU and its amendment (EU) 2019/863.

JUST IN GAME. www.gamesir.hk


CONTENUTO DELLA CONFEZIONE

GameSir-G7 HE *1 Cavo USB-C di 3 m *1 Manuale d'uso *1 Certificazione *1 Scheda di ringraziamento e assistenza post-vendita *1 Adesivo GameSir *1

REQUISITI


*Xbox One/Xbox Series X|S/PC (Windows 10 o successivi) con porta USB.

LAYOUT DEL DISPOSITIVO

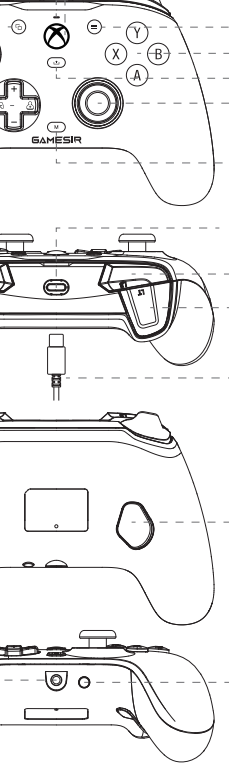


CONNETTI

Usa il cavo di tipo C incluso per collegare la maniglia al dispositivo e premi brevemente il pulsante Home per accenderlo. Lucce bianca fissa = Collegato

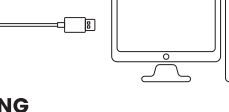

COMANDI VOLUME

1. Tenere premuto il pulsante M + Tasto direzionale su/gi  per aumentare/ridurre il volume principale. (Il livello in totale). *Quando si regola il livello massimo e minimo, si sentir  un segnale acustico.

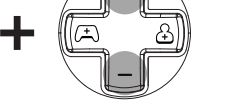

2. Tenere premuto il pulsante M + Tasto direzionale destro/sinistro per aumentare il volume di gioco e ridurre il volume d'chat vocod. Per diminuire il volume di gioco e aumentare il volume d'chat vocod, ridurre il volume di gioco e aumentare il volume d'chat vocod. *Quando si regola il livello massimo, medio e minimo, si sentir  un segnale acustico.



